


TRACTION BATTERY SYSTEM 16-16

2001 RANGER ELECTRIC VEHICLE

NiMH

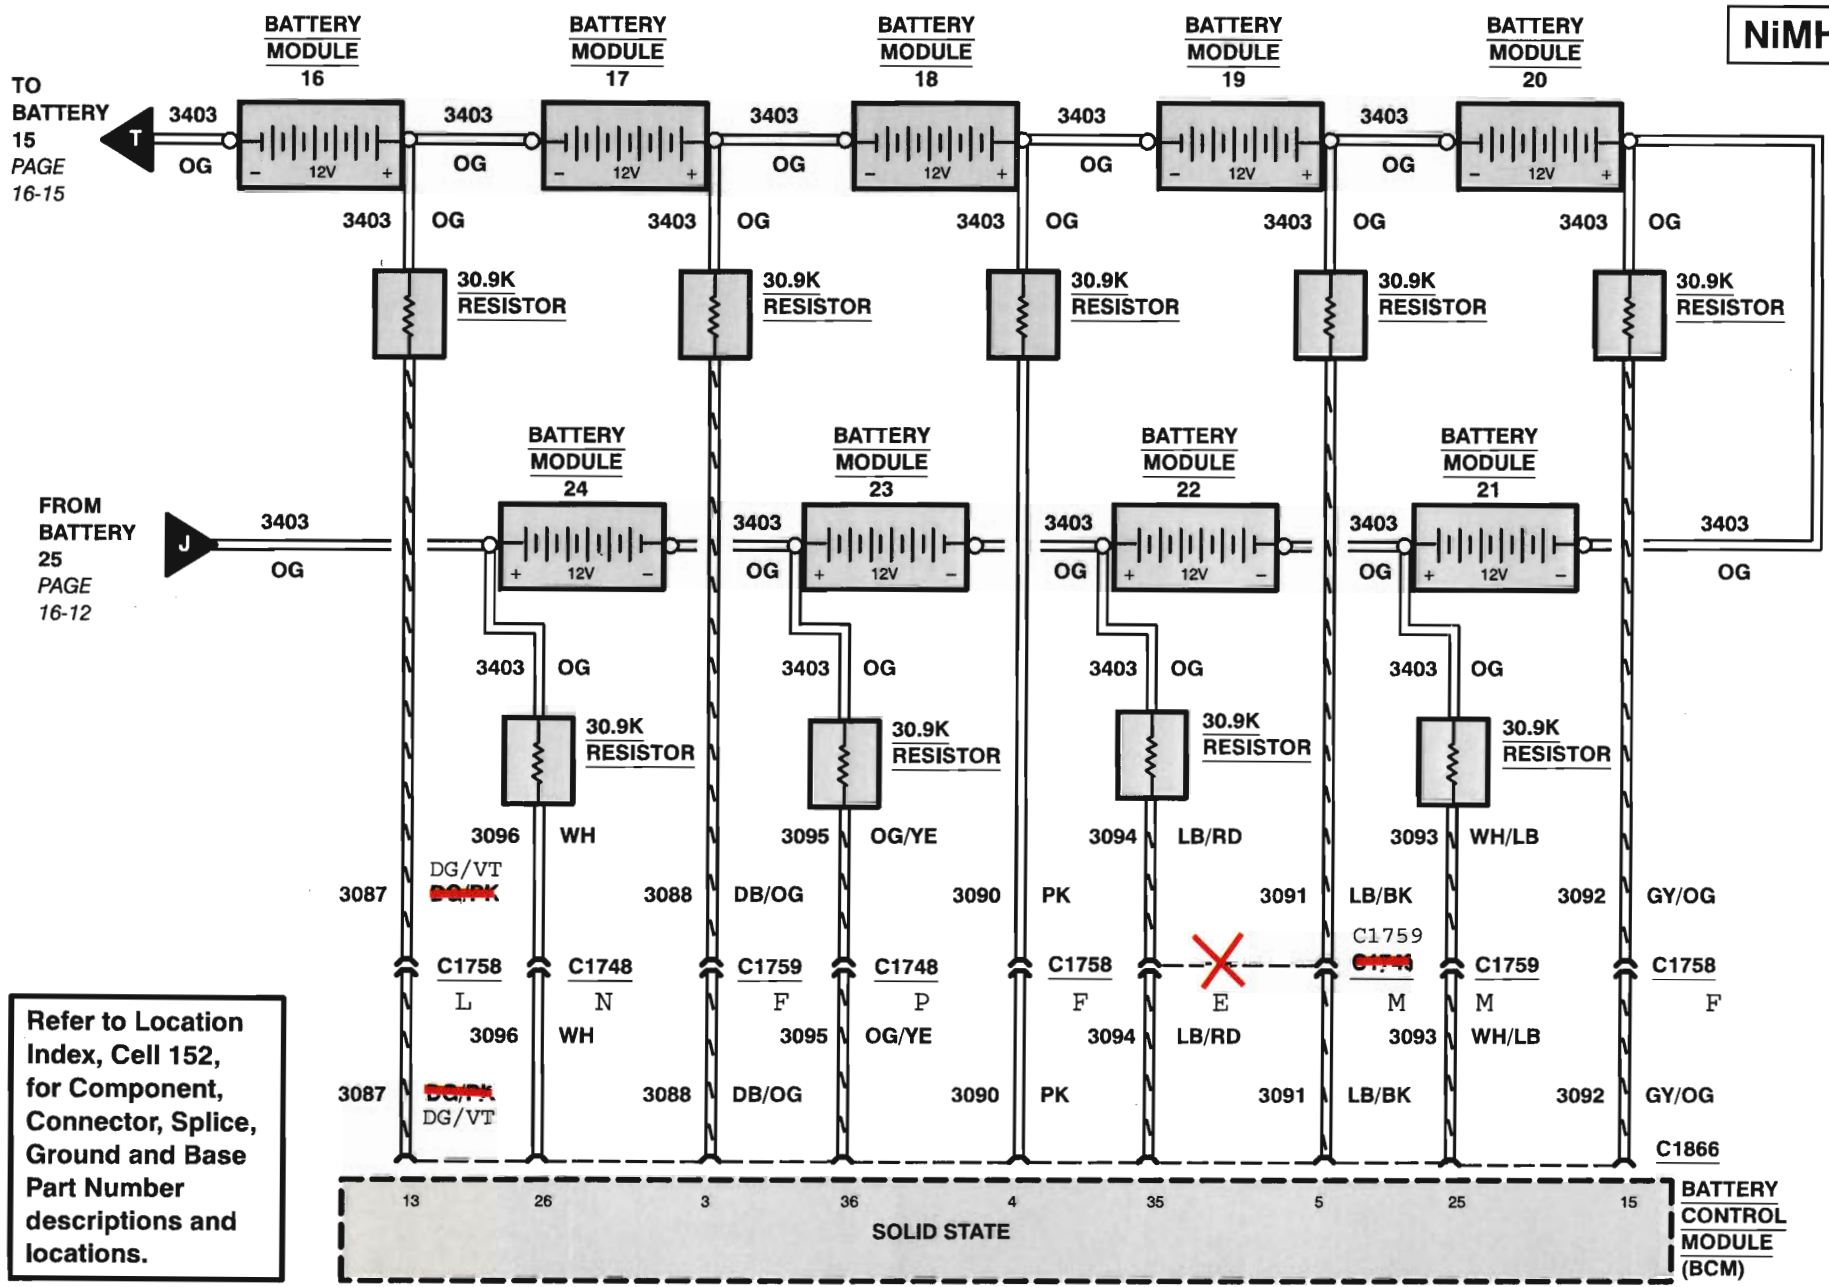

TO BATTERY 15
PAGE 16-15

FROM BATTERY 25
PAGE 16-12

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.

SOLID STATE
BATTERY CONTROL MODULE (BCM)